

SureShot Solutions Multi-Sweetener Dispenser

AC2-GP-1-G38 (AC2-GP-30)

AC2-GP-1-G38 (AC2-GP-30)

Daily maintenance tasks

BE 10 D1 Daily Cleaning

Weekly maintenance tasks

BE 10 W1 Product Hoppers,
Insert, Augers, &
Tubes



Hazards




These icons alert you to a possible risk of personal injury.

Equipment alerts

Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

Tips

Look for this icon to find helpful tips about how to do a procedure.

Why	To ensure dispenser operates accurately	
Time required	5 minutes to prepare	10 minutes to complete
Time of day	At close	For 24-hour restaurants: During low-volume periods
Hazard icons	 Electricity  Moving Parts  Sharp Objects/Surfaces	

Tools and supplies



Bucket, Clean &
Sanitized
Towels

Procedure

1. Wipe exterior surfaces using a soft cloth dampened with warm, clean, soapy water.



2. To clean the button panel, press and hold the Panel Disable button for three seconds until Panel Disabled appears in the display.



3. Wipe the panel with a soft cloth dampened with warm, clean, soapy water.

4. Rinse with a soft cloth dampened with warm, clean water.

5. Press and hold the Panel Disable button again for several seconds until Select Size appears in the display.



Tip: Button panel will enable automatically after 3 minutes of being disabled.

6. Remove the catch tray and screen by tilting the front of the catch tray up towards the dispenser and then pulling it away.



7. Rinse thoroughly with warm, clean water.

8. Wash in hot water with a good quality cleaner at a water temperature between 140 °F and 170°F.

9. Rinse well with warm, clean water.




Tip: If a dishwasher is available, the items may be cleaned on the full wash cycle.

10. Air dry **thoroughly**.

11. Insert the screen into the catch tray.

12. Replace the catch tray and screen by tilting the front of the catch tray up towards the dispenser and then pushing it under the front edge of the dispenser.



Why	To ensure dispenser operates accurately	
Time required	5 minutes to prepare	30 minutes to complete
Time of day	At close	For 24-hour restaurants: During low-volume periods
Hazard icons	 Moving Parts  Sharp Objects/Surfaces  Electricity	

Tools and supplies



Bucket, Clean & Sanitized Towels

Procedure


1. Unplug the dispenser.
2. Open the dispenser door.
3. Remove the lid and hopper insert by lifting them straight up and off the dispenser.
4. Remove the hoppers:
 - a. Remove tubes from guide plate.
 - b. Lift the hoppers up slightly to remove them from the dispenser.
 - c. Pour any product into clean, sanitized containers for temporary storage.
 - d. Remove tubes from hoppers.



5. Remove the auger from each hopper:

Option 1.

- a. Pinch the two sides of the auger tip together and push into the front bushing.
- b. Pull the auger out the back of the hopper and front bushing out of the front of the hopper.

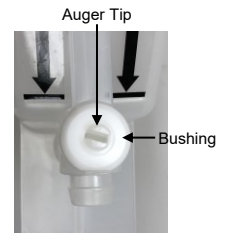

Option 2.

- a. Hold hopper so that the exposed tip of the auger at the front of the hopper is on the countertop with the small tab hanging over the edge of the counter.
- b. Push down firmly until the auger releases. Press in auger tip with finger if auger is not released completely.
- c. Pull the auger out the back of the hopper and front bushing out of the front of the hopper.



Product Hoppers, Inserts, Augers, and Tubes (continued)

6. Wash hoppers, insert, augers, and tubes in hot water with a good quality cleaner at a water temperature between 140 °F and 170 °F. Wash thoroughly to reach all corners and crevices.



7. Rinse well with warm, clean water.



8. Air dry hopper and auger thoroughly.

Tip: If a dishwasher is available, the items may be cleaned on the full wash cycle.


9. Wipe the interior compartment and the guide plate using a soft cloth dampened with warm, clean, soapy water.



10. Dry thoroughly with a soft cloth.

11. Reinstall the auger:

- a. Align the flat surface on the front bushing with the flat surface on the hopper opening at the front of the hopper.

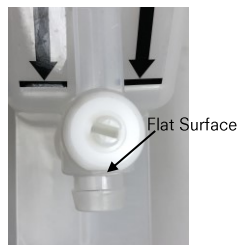


- b. Insert auger through the back of the hopper.



- c. Turn hopper and place front bushing on corner of countertop.



- d. Align flat surface on the back bushing with the flat surface on the hopper opening at the back of the hopper.

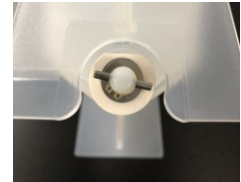

- e. Press firmly on back bushing until it clicks into place.

- f. Ensure the auger is securely installed.

12. Inspect the end of the auger for excessive movement, looseness or wear.

If loose or worn, product may build up or spill from that end. If this is the case, hopper assembly must be replaced.