


Instruction Sheet:

Download New Software to Dairy Dispensers Using a Programming Fob

IMPORTANT NOTE: After this procedure is completed, the dispenser **MUST** be fully loaded with product otherwise the dispense quantities will **NOT** be accurate. If you are using dairy bags, replace each product with a full bag.

The infrared program transfer fob is supplied by SureShot Solutions. It is pre-programmed to customer specifications.

The download is a simple wireless transfer of the software from the fob to the infrared programming transceiver located on the printed circuit board (PCB) inside the dispenser. Follow these instructions to download software to the PCB using the fob.

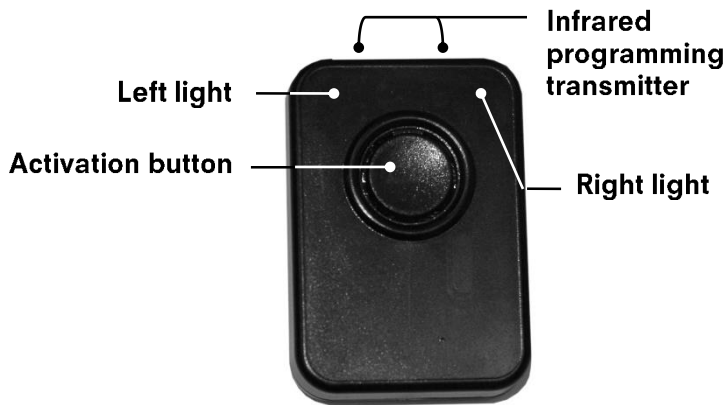

The infrared transceiver is located near the center of the PCB



1. Turn the dispenser off.
2. Remove the front panel.
3. Point the fob at the infrared programming transceiver on the PCB.
4. Press and hold the activation button to turn the fob on.
 - Hold the fob 4 to 6 inches from the surface of the PCB. The fob can transmit through the clear plastic protective sheet; however, you can lift this clear plastic sheet to locate the infrared transceiver more reliably.
5. Turn the dispenser back on, simultaneously releasing the activation button on the fob.
 - The left red light on the fob will illuminate for the duration of the programming sequence.
 - The display on the PCB will show **SS**, then **dL**, and finally **d.L**.
 - The right red light will illuminate briefly if the fob needs to re-transmit data that was not successfully received by the PCB.
6. When the left red light flashes 5 times in quick succession, the program has been successfully downloaded.
NOTE: This procedure can take at least 30 seconds.
7. The PCB display will show **d.L**. Wait until the display goes blank and a series of audible beeps occur before turning the dispenser off. This will take about 15 seconds.
8. Turn the dispenser on. The download procedure is now complete.
9. Press the **Up** button once on the circuit board to check the refrigeration setting. If **00** is shown on the circuit board's display, press the **Up** button repeatedly until the display shows **06**, the factory default setting.
10. Replace the front panel.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.