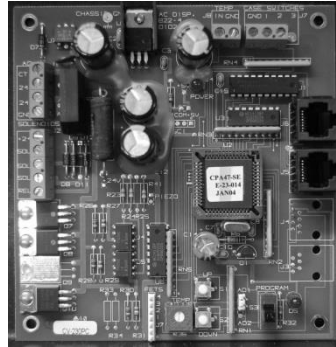
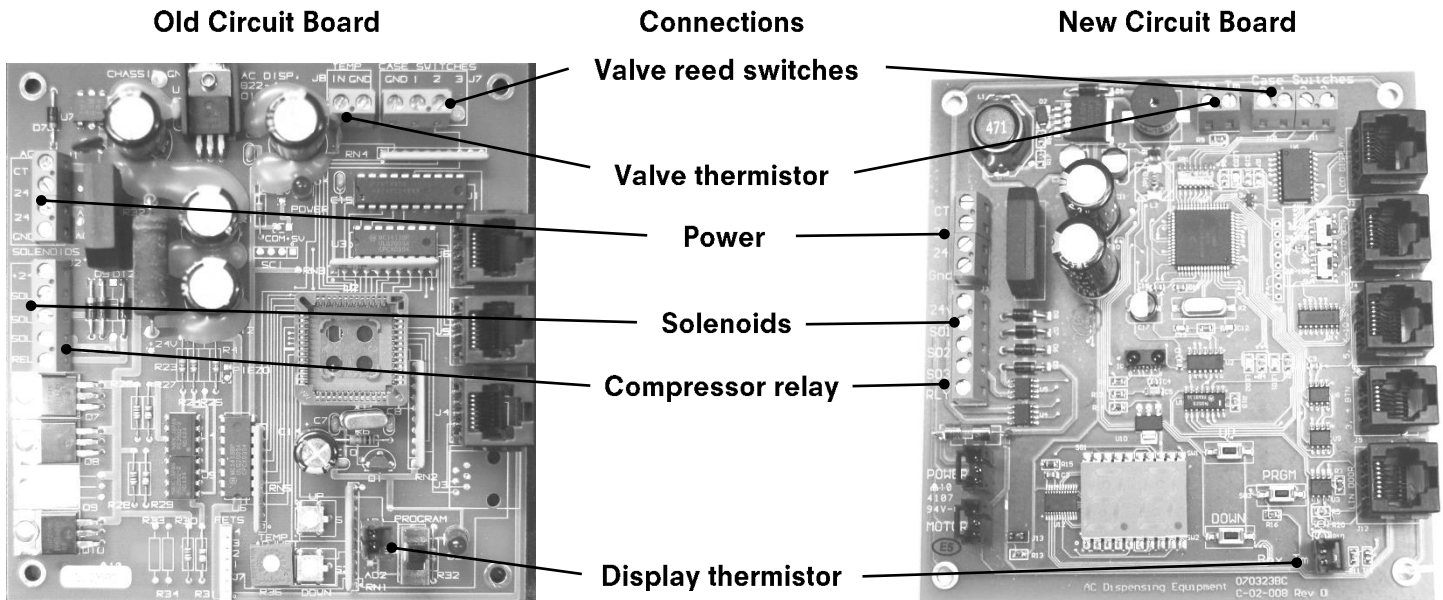


Instruction Sheet: Install and Set Up the New Circuit Board (B16 to C-01-008)

1. Remove the front panel cover secured with four screws.
2. Locate the printed circuit board (PCB) to be replaced. A red light should be on indicating power is supplied to the board.



3. Turn off the dispenser. The switch is either beside the PCB or is on the left side of the dispenser.
4. Unplug the dispenser.
5. Swap the wires, one at a time from the old PCB to the matching connectors on the new PCB.

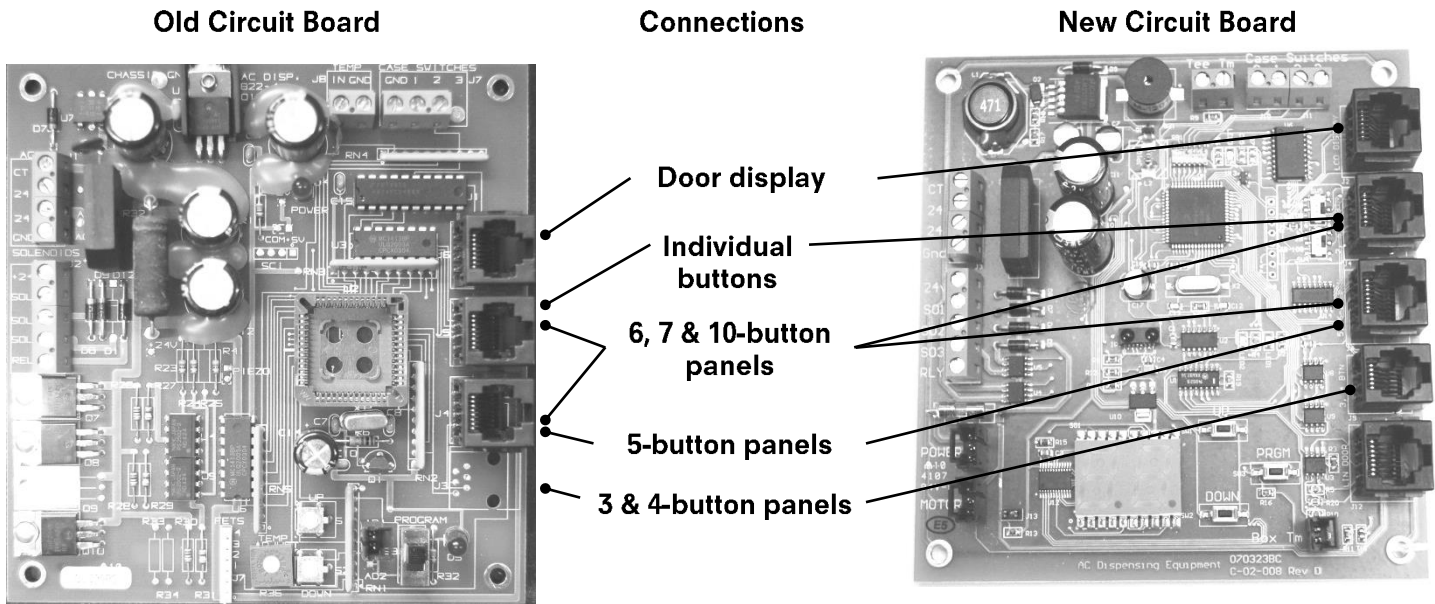


AC230 board shown. Valve 3 reed switch connector is not installed.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.

Instruction Sheet: Install and Set Up the New Circuit Board (B16 to C-01-008)

6. Swap the door cords, one at a time from the old PCB to the appropriate connectors on the new PCB. Note the new board has connectors for all possible button panels.



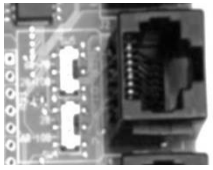
AC230 board shown. The 3 and 4 button panel is not installed.

7. Remove the four screws holding the old PCB in place and remove the old PCB.
8. Position the new PCB against the mounting posts and reinstall the screws removed in step 7.
9. Plug in the dispenser.
10. Turn on the dispenser.

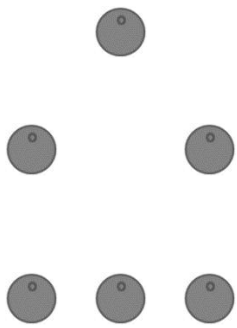
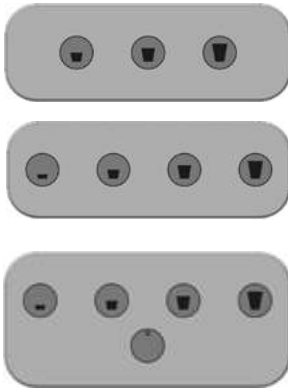
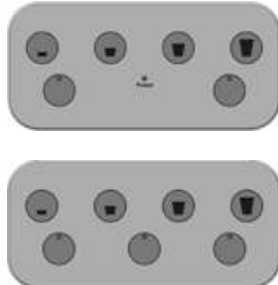
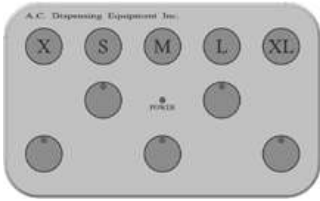
If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.

Instruction Sheet: Install and Set Up the New Circuit Board (B16 to C-01-008)

For individual button or 6, 7, and 10-button panels, proceed with step 11. For other panels, skip steps 11 and 12.
11. Locate the two button configuration switches SW4 and SW5. The table below shows the respective settings.

	SW5	Set this switch to UP for 6 & 7 button panels	Set this switch to DOWN for individual buttons and 10-button panels
	SW4	Set this switch to UP for individual buttons	Set this switch to DOWN for 6, 7 & 10-button panels

12. Set switches SW4 and SW5 to match the button panel installed on the machine

<p style="text-align: center;">Individual Buttons</p>  <p style="text-align: right;">SW5: DOWN</p> <p style="text-align: right;">SW4: UP</p>	<p style="text-align: center;">3, 4, & 5-Button Panels <i>(switch position not applicable)</i></p>  <p style="text-align: right;">SW5: N/A</p> <p style="text-align: right;">SW4: N/A</p>
<p style="text-align: center;">6 & 7-Button Panels</p>  <p style="text-align: right;">SW5: UP</p> <p style="text-align: right;">SW4: DOWN</p>	<p style="text-align: center;">10-Button Panels</p>  <p style="text-align: right;">SW5: DOWN</p> <p style="text-align: right;">SW4: DOWN</p>

13. Reinstall the front panel cover removed in step 1.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.