

IntelliShot dispensers with a side console for temperature adjustments are equipped with digital technology allowing changes to the dispense amounts and other operational functions. Adjustment buttons are located on the button panel on the door and are featured as four shapes.



When to Adjust the Target Amounts (Recipe)

Before making an adjustment to the target amounts, make sure the entire valve assembly (valve, plunger, and solenoid) has been cleaned thoroughly. Load a full bag of product, then dispense and weigh each size. If the amounts are still not dispensing correctly, check the target amounts (recipe) to make sure they are set correctly. If they are not, proceed to adjust the target amounts. If they are set correctly and are not dispensing accurately, do not change the target amounts (recipe). Instead, perform a volume adjustment (calibration).

Note: If using product tanks, do not forget to refill and reset your tank to the proper level.

Check and Adjust the Target Amounts

1. Enter Program mode.
 - a. Press and hold the square (■) Program Mode button. The star button to the left will light up and dispenser will beep. The hexagon button to the right will light up and dispenser will beep twice.
 - b. Release the Program Mode button. You are now in Program mode. P1 - Target Adj appears on the door display.
2. Make selections requiring adjustment.
 - a. Press the product button. Its light will come on and remain lit.
 - b. Press the size button. Its light will come on and remain lit.
Example: If you press CREAM and SMALL both of these buttons will light and remain lit, indicating this is the product and size you are about to adjust.
3. Adjust the target amounts.
 - a. Press the star (★) button to increase the target amount or the hexagon (●) button to decrease the target amount.
 - b. Repeat this process for each product and size requiring adjustment.
4. Exit Program mode.
 - a. Press and hold the square (■) Program Mode button for approximately 3 seconds until beeps are heard.
 - b. Release the Program Mode button. All lights should be off indicating you are back to normal operating mode.
5. Check the dispense amounts. Perform multiple dispenses of the product and sizes that were adjusted to verify these are now correct. If they are not, repeat steps 1 through 3 to ensure you have set the targets correctly. If they are set correctly, perform a volume adjustment (calibration).

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com. Find other helpful instruction sheets and videos on our website: www.sureshotsolutions.com.