


## Instruction Sheet: Re-programming an ACFC-10 using a Fob

Follow these instructions to reprogram an ACFC-10 FlavorShot dispenser using a fob (hand-held program transfer device) supplied by SureShot Solutions.

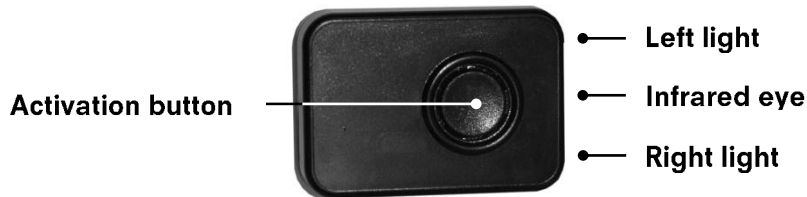

1. Press and hold the **Panel Disable** button (an example is shown below) on the door until two beeps are heard and **Panel Disabled** appears in the display. The button panel lights will flash in groups when the button is released.



2. Aim the fob at the infrared window (red rectangle next to the display), then press and release the activation button on the fob. When aimed correctly, the left light on the fob illuminates indicating that it is communicating correctly. The display on the door will show **IR** or **Align IR FOB** when downloading starts. You will also see lights flash on and off on the button panel.

*Note: If the right light on the fob illuminates, move the fob slightly to re-align it with the infrared window on the door. Once re-aligned, the right light will turn off while the left light should remain lit. If both lights turn off then the fob requires re-activation by pressing the activation button.*



3. Hold the fob in place until the left light on the fob blinks 5 times in succession (approximately 1 to 3 minutes).
4. You can now remove the fob.
5. Wait for approximately 2 to 3 minutes until the initializing process has been completed and **Make Selection**, **Select Beverage** or similar start-up message appears in the display. Do not turn the dispenser off until the initialization is complete.

**If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at [service@sureshotsolutions.com](mailto:service@sureshotsolutions.com).**