

Instruction Sheet:

Reprogram FlavorShot Dispenser Using Program Transfer Device (FOB)

Follow these instructions to reprogram FlavorShot by SureShot dispensers using the hand-held Program Transfer Device (**FOB**) (shown right) supplied by SureShot Solutions.



1. Hold the program transfer device (**FOB**) approximately 1/2inch in front of the Infrared Programming Window while completing steps 1-4. This window is located on the upper right corner of the front door panel, as shown in the figure below.
2. While holding the **FOB** in place, press and hold the RESET button on the upper right corner of the door until an audible beep occurs. Release the button. The LCD display on front door will read "Panel Disabled" and the button panel LED's will flash in sequence.
3. **Press and release** the button on the **FOB**. The left LED on the **FOB** should be lit indicating that it is communicating. During download, the LCD display will read "IR". If communication is lost, the RESET button will flash and the right LED on the FOB will illuminate. If this occurs, reposition the **FOB** until the RESET button stops flashing and only the left light on the **FOB** is lit.
4. Hold the **FOB** in place until the left button on the FOB flashes 5 times and "Select Flavor" appears in the LCD window. The LEDs on the **FOB** will go out and the door will reboot itself. This process will take about 60-90 seconds.



Note: If the power is interrupted between Step 3 and Step 4, the dispenser will start up with no text displayed in the LCD on the door and the RESET light will blink. This is an indication that the door is searching for the FOB. Resume procedure from step 3.

Note: If both indication lights on the FOB turn off, resume procedure from step 3.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.