


Instruction Sheet:

Dairy Dispenser

Side Console Temperature Offset Adjustment

Before making this adjustment, make sure the dairy product has been in the refrigerated compartment of the dispenser for at least 24 hours.

SureShot Dairy Dispensers are equipped with a side console which displays a continuous or touch-of-a-button temperature reading and allows temperature adjustment. The side console is located on the lower left side toward the front of the dispenser. Temperature is shown in Fahrenheit.

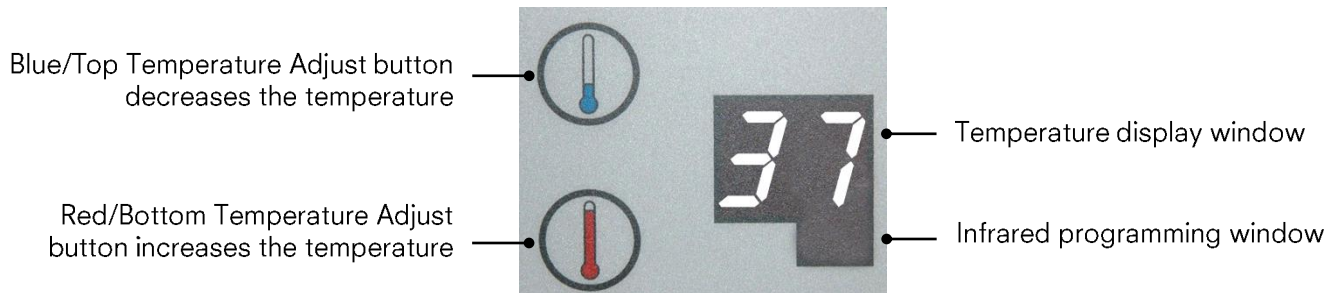

Is calibration needed?

1. Read and record the temperature shown on the dispenser's side console. If the side console is in Selective Display mode (d2) and is not showing the temperature, press either button to display the temperature.
2. Use a high quality, accurate thermometer to measure and record the temperature of the product.
3. If the displayed temperature and the actual product temperature are within ± 2 °F no calibration is needed. If the difference is more than 2 °F, proceed to the calibration instructions below.

Enter Continuous Display mode

If the side console is in Continuous Display mode (d1 – temperature is shown continuously on the side console display) proceed to step 1. The dispenser must be in Continuous Display mode for you to adjust the temperature offset.


If the side console is in Selective mode (d2 – side console display is blank; temperature is only displayed by pressing a temperature adjust button), enter Continuous Display mode.

To enter Continuous Display mode from Selective mode:

Press and hold the red/bottom temperature adjust button for approximately 3 seconds until a beep is heard. "d1" will be shown for 3 seconds and temperature will remain on the temperature display window confirming Continuous Display mode is active.

Enter Program mode

1. Enter Program mode. Press and hold both side console buttons, at the same time, for 3 seconds. When Program mode is entered, you will hear double beeps and both "dots" on the display will light up.

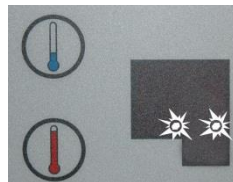

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.

Instruction Sheet:

Dairy Dispenser

Side Console Temperature Offset Adjustment

2. Release both buttons. The display will show P1 and the dots will flash. After 3 seconds the temperature will be shown and the dots will continue to flash.



3. Press the bottom button to select "P1". The current temperature offset will be shown for 3 seconds followed by the temperature and flashing dots.
4. Determine the new temperature offset. The temperature offset value has to change by 1 for every 2 °F of calibration required.

$$\text{New temperature offset} = \text{current temperature offset} + (\text{product temperature} - \text{display temperature})/2 \text{ } ^\circ\text{F}$$

5. Adjust the temperature offset value to the new value from Step 4. Use the top button to increase and use the bottom button to decrease the temperature offset value. The first button press confirms the original temperature offset value. Press the button repeatedly until the value is changed to the new value from step 4.
6. Wait 3 seconds for both dots to begin flashing again. The display will show the temperature.
7. Wait up to 5 seconds for the new temperature offset value to take effect and the newly calibrated temperature to be shown.
8. Exit Program mode. Press and hold both side console buttons at the same time for about 3 seconds. You will hear double beeps when you exit Program mode.
9. Release the buttons. The side console will now be in Continuous Display mode (d1).
10. Return to Selective Display mode (d2) if the dispenser was originally in that mode. Press and hold the bottom side console button for 3 seconds, until you hear a beep and the display shows d1.
11. Release the button.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.