


McDonald's PM Card: IntelliShot 2.0 Refrigerated Dairy Dispenser Monthly Cleaning Procedure

SURESHOT
SOLUTIONS

Monthly Cleaning/Sanitizing	Every 30 Days	BE95 M1
-----------------------------	---------------	---------

Why	To ensure dispenser stays clean and to ensure accurate dispense amounts.	
Time required	5 minutes to prepare	15 minutes to complete
Time of day	At close	For 24-hour restaurants: during low volume periods
Hazard icons	 Chemicals	

Tools and Supplies



Clean, sanitizer-soaked towels



KAY® Peroxide Multi-Surface Cleaner & Disinfectant Solution (3in1)




Small brush



Soiled towel bucket

Monthly: Door gasket; valve assembly

1. Open the dispenser door and inspect the door gasket to make sure that there are no cuts or gaps.

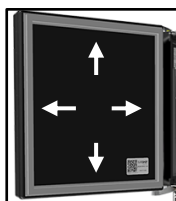

2. Spray a sanitized towel with KAY® Peroxide Multi-Surface Cleaner & Disinfectant Solution and wipe the gasket clean. Use a small brush to reach all corners and crevices.




3. Allow to air-dry.

Perform these next steps monthly, or as required when a new product bag is loaded.


4. Turn off the dispenser.



5. Remove the valve insert by pushing the plunger in with one hand and pulling the valve insert down and out with the other hand.

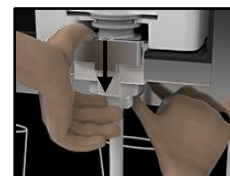

6. Remove the product case with empty product bag from the product compartment.

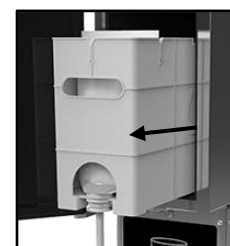

7. Remove the empty bag from the product case. Discard the bag.




If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 888 777-9990 or email at service@sureshotsolutions.com. Find other helpful instruction sheets and videos on our website: www.sureshotsolutions.com.


McDonald's PM Card: IntelliShot 2.0 Refrigerated Dairy Dispenser Monthly Cleaning Procedure

SURESHOT
SOLUTIONS

8. Remove the plunger by pulling it straight out.

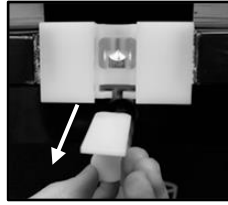


9. Wash, rinse, and sanitize the valve insert and plunger in the 3-compartment sink. If required, use a small brush for a more thorough clean.

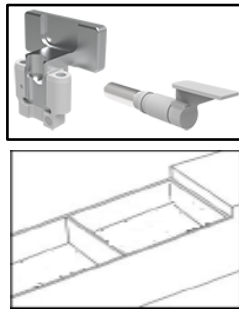

10. Allow to air-dry.

11. Wipe the inside and outside of the valve block with a sanitized towel sprayed with KAY® Peroxide Multi-Surface Cleaner & Disinfectant Solution. If required, use a small brush to reach all the corners and crevices that are inside and underneath the valve block.

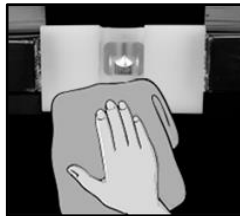


12. Allow to air-dry.


13. Discard the towel into the soiled towel bucket immediately after use.




14. Insert the plunger.

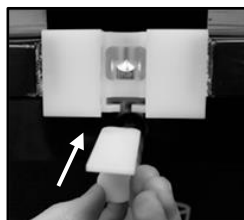


15. Place a full product bag into the product case.

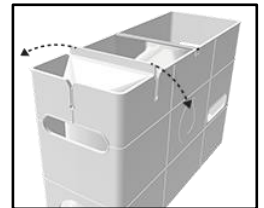

16. Load the product case with a full product bag back into the product compartment.

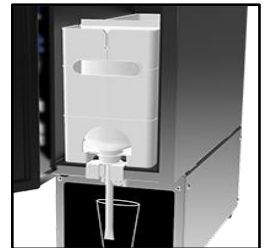

17. Push in the plunger and reinstall the valve insert back up into the valve assembly.

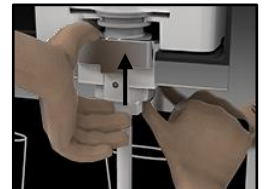

18. Close dispenser door.



19. Turn on the dispenser.



If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 888 777-9990 or email at service@sureshotsolutions.com. Find other helpful instruction sheets and videos on our website: www.sureshotsolutions.com.