

Instruction Sheet:

AC6.E Sugar Dispenser: Changing the Dispense Tube

1. Unplug the dispenser.
2. Remove the sugar from the dispenser.
3. Turn the black thumbscrew on the valve counterclockwise to open the door and release the tube.
4. Open the valve door.
5. Remove the black screw at the base of the hopper on the back of the dispenser (see Figure 1), if applicable.
6. Remove the screws on the sides of the hopper, if applicable.
7. Lift the hopper carefully, straight up off the dispenser base (see Figure 2). Do not pull on the cord that connects the control panel to the circuit board.



Back screw

Figure 1

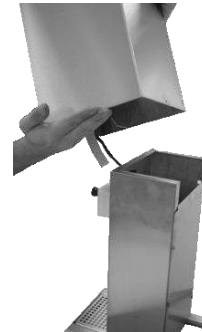


Figure 2

8. Lay the dispenser on its side (see Figure 3). Do not unplug or pull on the control panel cord.

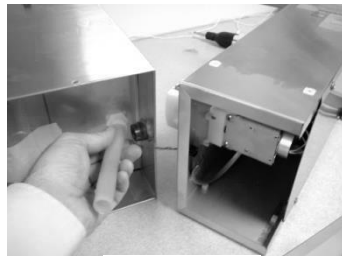


Figure 3



Figure 4

9. Remove the old dispensing tube by pulling it off the white fitment. Discard the old tube.
10. Replace with a new dispensing tube. Slowly turn the tube as you push it on the white fitment.
11. Replace the hopper on the base (see Figure 4). Make sure the control panel cord does not get pinched between the hopper and the base of the dispenser.
12. Replace and hand-tighten the back or side hopper screws by turning them clockwise.
13. Make sure that the dispensing tube is aligned in the center of the dispense valve. Do not kink, twist, or pinch the tube.
14. Close the valve door by inserting the black valve thumbscrew and turning it clockwise. Do not over-tighten.
15. Reconnect to the power source.
16. Push any size button to make sure the valve opens and closes (you'll hear a click) before filling the hopper with sugar.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.