


# Instruction Sheet:


## IntelliShot - Loading a Dairy Bag and Proper Tube Placement

### LOADING A DAIRY BAG

1. Open the dispenser door and remove the product case. Close the dispenser door.
2. Load a 5 L or 2.5 G (10 L) pre-chilled dairy bag.
  - a. To load a 5L bag, install the 5L product case insert. Hold the bottom two corners and sides of the bag and lower it into the product case with tube positioned towards the front of the product case so the tube exits the product case opening.

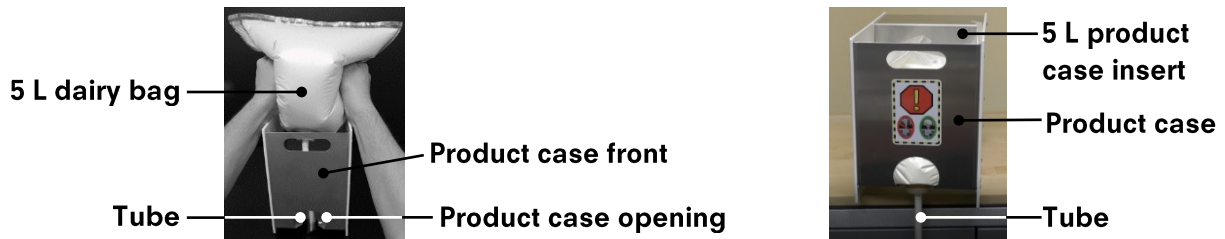

- b. To load a 2.5 G (10 L) bag, hold the top corners of the bag and lower it into the product case with tube positioned towards the front of the product case so the tube exits the product case opening.

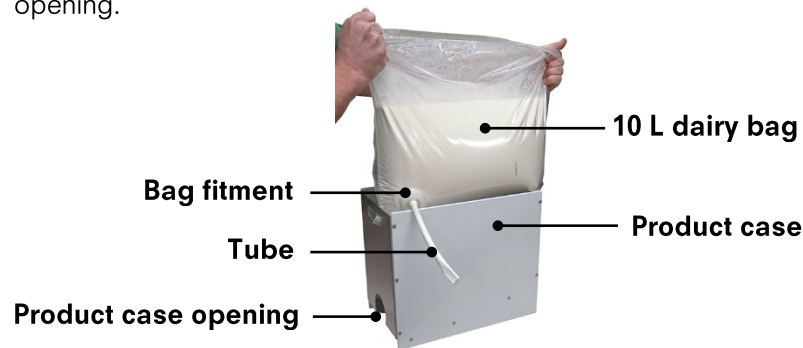

3. Guide bag fitment and tube through bottom opening of the product case. **Do not pull directly on the tube cap or tube.** Slide the top ring of the bag fitment (i.e., the ring closest to the bag) into the product case opening so that it is resting on the product case floor. Do not use the lower ring as dispense accuracy will be impacted.



4. Place product case in dispenser with the tube facing out.


**If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone (888 777-9990 or +1 902 865 9602) or email ([service@sureshotsolutions.com](mailto:service@sureshotsolutions.com)). Find other helpful instruction sheets and videos on our website at [www.sureshotsolutions.com](http://www.sureshotsolutions.com).**

# Instruction Sheet:


## IntelliShot - Loading a Dairy Bag and Proper Tube Placement

### TUBE PLACEMENT IN THE VALVE

1. Center the tube in the valve opening. Do not pull or stretch the tube. The tube should not be twisted, kinked or pinched.

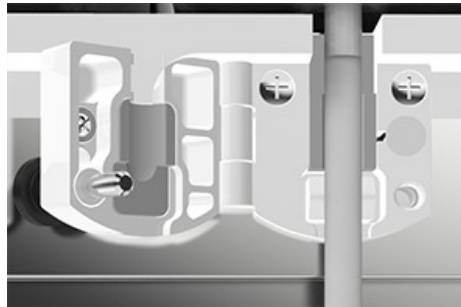

2. Remove and discard the plastic covering on the tube, if present.
3. To clear product from the tube before cutting:
  - a. Fold up and pinch the tube with your fingertips just below the valve. This will push product out of the tube and up into the bag.
  - b. While holding the tube, close the valve door and turn the thumbscrew clockwise until the valve door is snug and you hear a sound. Do not over-tighten the thumbscrew.
  - c. Release the tube and close the dispenser door.
  - d. Use sanitized, sharp scissors to carefully cut the tube at a 45-degree angle to a maximum length of 5/8-inch (1.5 cm) from the bottom of the valve door. Discard the cut portion of the tube.

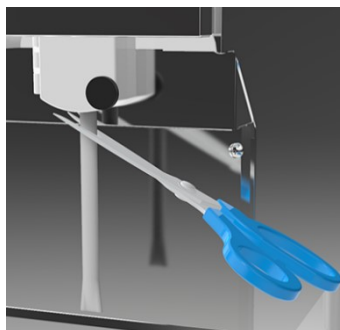

**If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone (888 777-9990 or +1 902 865 9602) or email ([service@sureshotsolutions.com](mailto:service@sureshotsolutions.com)). Find other helpful instruction sheets and videos on our website at [www.sureshotsolutions.com](http://www.sureshotsolutions.com).**