


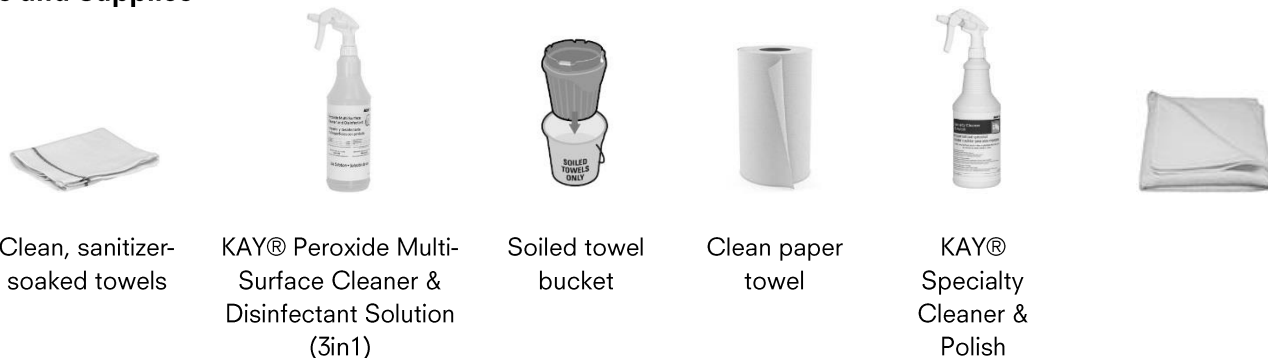
McDonald's PM Card: IntelliShot 2.0 Refrigerated Dairy Dispenser Daily Cleaning Procedure

SURESHOT
SOLUTIONS

Daily Cleaning/Sanitizing	Daily	BE95 D1
---------------------------	-------	---------


Why	To ensure dispenser stays clean.	
Time required	5 minutes to prepare	30 minutes to complete
Time of day	At close	For 24-hour restaurants: During low volume periods
Hazard icons	 Chemicals	

Tools and Supplies





Daily Procedure: Catch tray; product case and insert; product compartment; exterior and button panel

1. Remove the catch tray and separate the two parts.

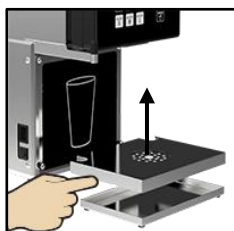

2. If a dishwasher is available, clean the two catch tray parts on the full wash cycle. Otherwise, wash, rinse, and sanitize in the 3-compartment sink.

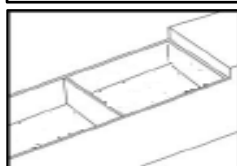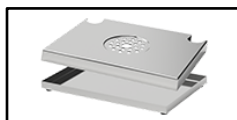


3. Allow to air-dry.

4. Put the two parts back together and replace the catch tray.



Perform these next steps daily, or as required every time a new product bag is loaded.

5. Remove the valve insert by pushing the plunger in with one hand and pulling the valve insert down and out with the other hand.

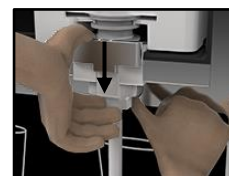

6. Open the dispenser door and remove the product case with empty product bag from the product compartment.



7. Remove the empty bag and product case insert from the product case. Discard the bag.




If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 888 777-9990 or email at service@sureshotsolutions.com. Find other helpful instruction sheets and videos on our website: www.sureshotsolutions.com.

McDonald's PM Card: IntelliShot 2.0 Refrigerated Dairy Dispenser Daily Cleaning Procedure

SURESHOT
SOLUTIONS

8. If a dishwasher is available, clean the product case and insert on the full wash cycle. Otherwise, wash, rinse, and sanitize in the 3-compartment sink.

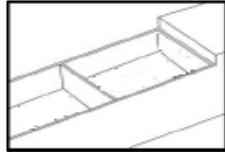

9. Dry thoroughly with a clean paper towel, or allow to air-dry.

10. Spray a sanitized towel with KAY® Peroxide Multi-Surface Cleaner & Disinfectant Solution and wipe inside the product compartment.




11. Dry thoroughly with a clean paper towel.


12. Discard the towel into the soiled towel bucket immediately after use.



13. Reinstall product case insert back into the product case.

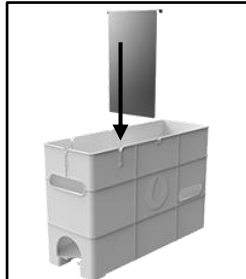


14. Place a full product bag into the product case.

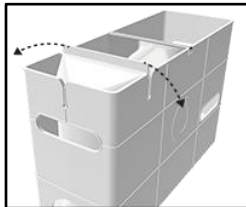

15. Load the product case with a full product bag back into the product compartment.



16. Push in the plunger and reinstall the valve insert back up into the valve assembly.

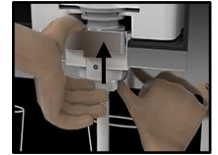

17. Close dispenser door.

18. Press and hold the **lock button** on the button panel until the display shows **LOCKED** and the SureShot symbol is solid yellow. This will disable the button panel for cleaning.



19. Spray a **clean**, sanitized towel with KAY® Peroxide Multi-Surface Cleaner & Disinfectant Solution and wipe down the button panel and exterior of the dispenser.



20. Dry thoroughly with a clean paper towel.

21. Discard the towel into the soiled towel bucket immediately after use.



22. If needed, polish the exterior stainless steel areas by spraying a clean paper towel with KAY® Specialty Cleaner & Polish and wipe until dry. Discard the paper towel. Do not allow stainless-steel cleaner to come into contact with the button panel or any plastic parts.



23. Press and hold the **lock button** to resume dispensing.



If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone at 888 777-9990 or email at service@sureshotsolutions.com. Find other helpful instruction sheets and videos on our website: www.sureshotsolutions.com.