

Instruction Sheet:


Dairy Calibration Procedure (Model AC110-V2)

To prepare the dispenser for calibration:


1. Load a full dairy bag and cut the tube before calibrating. The dairy bag must be loaded correctly and the tube cut as directed for successful calibration.
2. After loading a full dairy bag, place a cup under the dispense point. Press the 3-shot button 3 times to dispense product which will remove air from the tube and allow the bag to settle.

Follow these instructions to calibrate:

1. Press and hold the **settings button** for one second to enter the settings page.

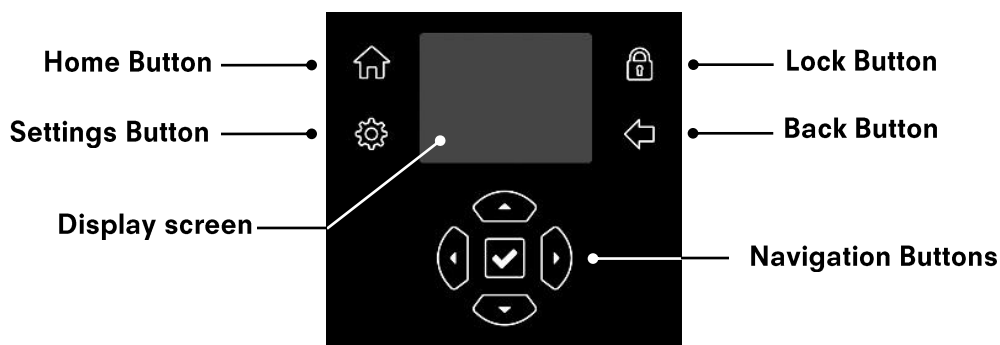

2. If not already highlighted, press the **right or left navigation button** repeatedly until the calibration icon is highlighted.

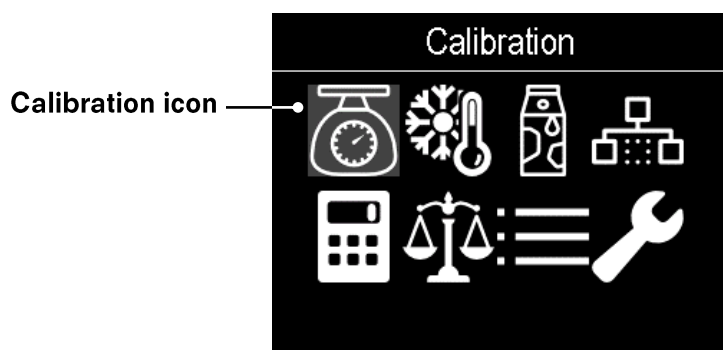


AC110-V2 Display Screen


If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone (888 777-9990 or +1 902 865 9602) or email (service@sureshotsolutions.com). Find other helpful instruction sheets and videos on our website at www.sureshotsolutions.com.

Instruction Sheet: Dairy Calibration Procedure (Model AC110-V2)


3. Press the ☒ **button**. The first page shows the current calibration values as percentages. A countdown to the next scheduled calibration is displayed. Once the countdown reaches zero, a Calibration Required message will appear.

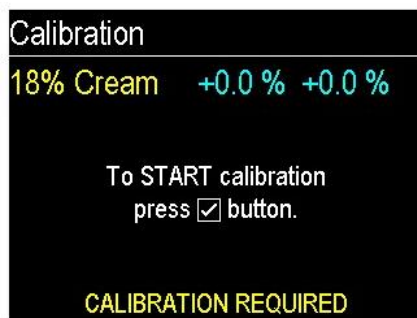

4. Press the ☒ **button** to start the calibration procedure.
5. Set a scale to grams.
6. Place an empty cup on the scale and zero/tare the scale.
7. Place the cup under the dispense point.
8. Press the ☒ **button** to dispense product. Please note, there are four test dispenses in total.

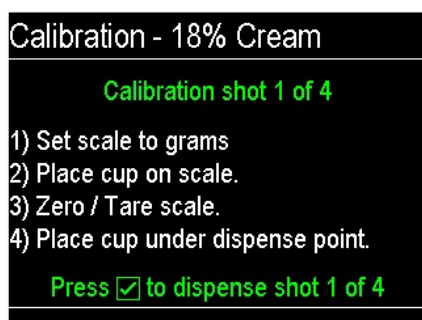


9. The number displayed is the expected weight in grams of the first calibration test dispense (15.0 grams).

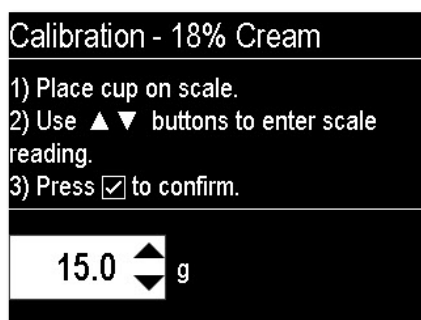


If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone (888 777-9990 or +1 902 865 9602) or email (service@sureshotsolutions.com). Find other helpful instruction sheets and videos on our website at www.sureshotsolutions.com.

Instruction Sheet: Dairy Calibration Procedure (Model AC110-V2)

10. Place cup with the dispensed product onto the scale to check its weight.
11. Use the **up or down navigation button** to change the displayed number to match the actual weight shown on the scale display. Press the **☑ button** to confirm the amount.
12. Discard product from the cup. Place cup back on the scale and zero/tare the scale.
13. Place the cup back under the dispense point.
14. Press the **☑ button** to dispense product. The number displayed is the expected weight in grams of the second calibration test dispense (30.0 grams).

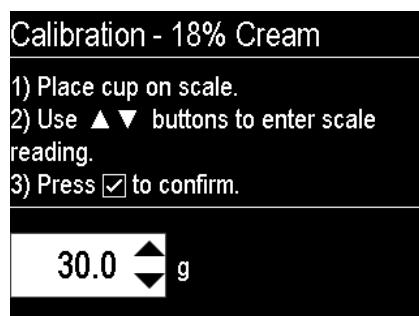

15. Place cup with the dispensed product onto the scale to check its weight.
16. Use the **up or down navigation button** to change the displayed number to match the actual weight shown on the scale display. Press the **☑ button** to confirm the amount.
17. Discard product from the cup. Place the cup back under the dispense point and repeat steps 8 to 16 one more time in order to complete the third and fourth test dispenses.
18. Calibration is now complete. A countdown to the next scheduled calibration will be displayed.

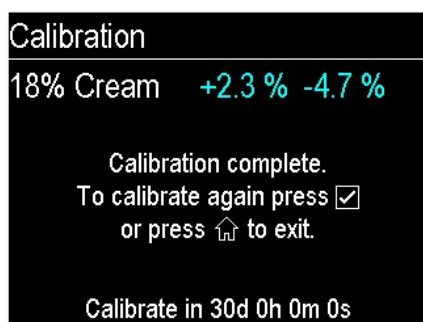

— Calibration notification (countdown)

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone (888 777-9990 or +1 902 865 9602) or email (service@sureshotsolutions.com). Find other helpful instruction sheets and videos on our website at www.sureshotsolutions.com.