Instruction Sheet:

Adjust Dispense Targets (Recipe) for Dairy Dispensers with C-01-008 Circuit Board



When to Adjust the Target Amounts

Before making an adjustment to the target amounts, make sure the entire valve assembly (valve, plunger, and solenoid) has been cleaned thoroughly. Load a full bag of product, then dispense and weigh each size. If the amount is incorrect, check the target amounts and adjust if necessary.


Note: If using product tanks, do not forget to refill and reset your tank to the proper level.

Adjust the Target Amount

1. Locate and remove the front panel cover secured with 4 Phillips screws.



- 2. To enter program mode, press and hold the **PRGM** button on the circuit board. After 7 seconds the dispenser will beep twice to indicate you have entered program mode.
- 3. Press the **UP** or **DOWN** button several times until the door display shows Target Adjust. The display on the circuit board will show P1.
- 4. Press the **PRGM** button once to enter this page.
- 5. Press the product and then the size button you wish to adjust.
- 6. Press the **UP** button to increase the target amount or the **DOWN** button to decrease the target amount. Repeat this process for any size and product you wish to adjust.
- 7. Once all of the adjustments are complete, press the **PRGM** button once to exit this page. Then press and hold the **PRGM** button to exit program mode. After 7 seconds the dispenser will beep twice to indicate you have exited program mode.
- 8. Once you have exited Program mode, dispense the product and sizes you previously adjusted and verify these are now correct. If they are not, repeat steps 1 through 5 to ensure you have set the targets correctly. If they are set correctly, perform a volume adjustment (calibration).
- 9. Reinstall the front panel.

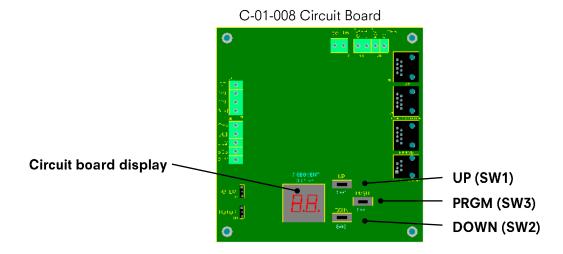

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions
Technical Assistance Center by phone at 1-888-777-9990 or e-mail at service@sureshotsolutions.com.
Find other helpful instruction sheets and videos on our website: www.sureshotsolutions.com.

D-19-201 Rev. D Page 1 of 1