

INSTRUCTION SHEET: TO CHANGE THE SUGAR TUBE IN FLAVORSHOT DISPENSERS

NOTE: You may have to remove a flavor tank adjacent to the sugar tube fitting to give you easy access to the sugar tube fitting at the center of the bottom row of flavor tanks – so before beginning the tube change, open the dispenser door, slide the tank shelves forward, check for access, and if you must remove a tank, note the adjacent tank you will remove. If you have large hands, you may need to remove two tanks. To begin this procedure, the dispenser door must be closed.




Ensure the new tube is cleaned and sanitized **before** it is placed in the dispenser.

1. Place a catch container under the Product Dispensing Block to catch any residual flavor and to prevent spills. Use a clean container if you plan to return the flavor to the flavor tank.
2. **If** you must remove an adjacent flavor tank to gain access, drain flavor from the tank (two if required) adjacent to the sugar line:
 - a. Press the Flavor button for the tank to be removed.
 - b. Before the red light on the Flavor button goes out, press and hold the Clean button for 2 seconds. The Clean button is located on the bottom left of the button panel on the dispenser door.
Allow the pump system to empty all residual product from the flavor tank into the catch container. When the flavor tank and pump are empty, press the Clean button again to cancel the remainder of the clean cycle.
Discard the drained liquid OR set it aside if you plan to return it to the tank.

3. Open the dispenser door and slide the tank shelves forward. Lift up the empty flavor tank(s) from the pump body and remove. Set the tank(s) aside to replace in Step 6.

4. Remove the old sugar tube:

- a. remove the barbed fitting at the end of the tube from the hex fitting on the tank shelf.
- b. pull the sugar tube to create enough slack to remove tube from barbed fitting.
- c. remove the barbed fitting from the tube.
- d. remove the back panel from the dispenser. Remove the 10 screws – retain for re-assembly.
- e. at the back of the dispenser, pull the tube through and out of the dispenser and out from the back panel. Discard the used sugar tube.

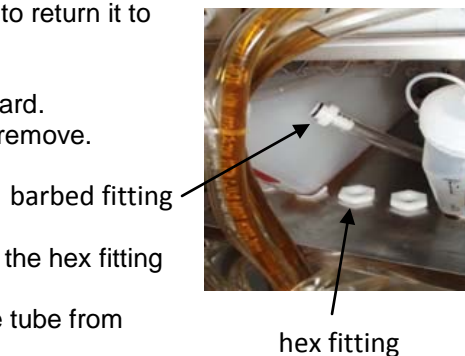

5. Install the new sugar tube:
 - a. insert the soft tube end of the new tube through the hole in the back panel, entering the hole from the outside face of the panel.
 - b. thread the tube through the grommetted hole in the metal panel, through to the front of the dispenser.
 - c. pull the tube through from the front of the dispenser and attach it to the barbed fitting on the tank shelf.
 - d. insert the barbed fitting into the hex fitting on the pump shelf.

If you have any questions or concerns when performing this procedure, please contact the SureShot Dispensing Systems® Technical Assistance Center at 1-888-777-9990 or 1-902-865-9602 OR e-mail the Center at service@sureshotdispensing.com

INSTRUCTION SHEET: TO CHANGE THE SUGAR TUBE IN FLAVORSHOT DISPENSERS



- e. check the tube to ensure there are no cuts, kinks, or pinches in the tube line. If the tube is pinched or obstructed, sugar will not be dispensed accurately.
 - f. reattach the back panel, using the screws removed in 4d.
 - g. pull tube out through the back panel to remove excess. Tube inside machine should have smooth curves.
 - h. insert the hard tube end of the new sugar tube into a liquid sugar container and attach lid.
6. Reinstall flavor tank(s) removed in Step 3. Replace flavor removed OR refill the tank (page 12 - Operations Manual)
 7. Slide the tank shelves back into place in the dispenser.
 8. Reset the tank for the Flavor tank(s) installed:
 - Close the dispenser door.
 - Press the Flavor button for the tank that was filled.
 - Press the Reset button on the upper front door of the dispenser.
 9. Prime the pump for the Flavor tank(s) installed:
 - Place empty cup or container under the product dispense block.
 - Press the individual flavor button.
 - Press the PRIME button and hold for 2 seconds.
 10. Repeat Steps 9 and 10 for the Sugar tank, using button 8, the Liquid Sugar button.
 11. Close the dispenser door.
The dispenser is now ready to operate.

If you have any questions or concerns when performing this procedure, please contact the SureShot Dispensing Systems® Technical Assistance Center at 1-888-777-9990 or 1-902-865-9602 OR e-mail the Center at service@sureshotdispensing.com